

SOFT GROUND ANCHORS KIT

Installation instructions

REQUIRED (not included):


- DRILL with 3mm WOOD BIT
- LARGE CLUB-HAMMER
- SCREWDRIVER for cross-point or anti-vandal screws

RECOMMENDED (not included):

- PROTECTIVE EYEWEAR
- PROTECTIVE GLOVES
- SAFETY HELMET
- UNDERGROUND CABLE / PIPE LOCATOR


Installation Tools

(Included with kit GA003, not Included with GA002)

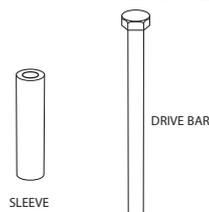


Fittings

4 x Cross point screws
4 x Vandal resistant screws
2 x Tube caps

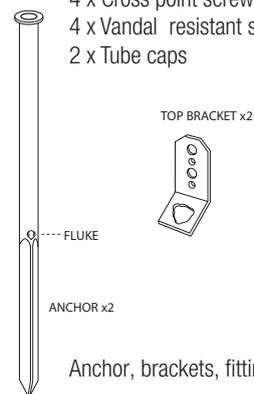

1

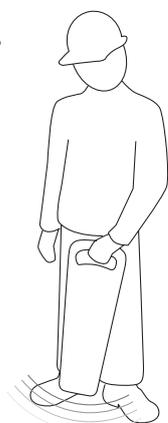

Always check for buried services.
Use an underground cable / pipe locator if you are unsure.

2

Mark hole positions through brackets.
Drill 2 pilot holes: 3mm dia. x 45mm deep.
Fix straps using either cross point or vandal resistant screws.
Position seat.




Note: If removal of seat is likely use the cross point screws.

ANCHORING

3



Insert drive bar through sleeve and into anchor. Position anchor through the bracket.
Using the hammer drive the anchor, at a shallow angle from the vertical, until flush with the bracket.

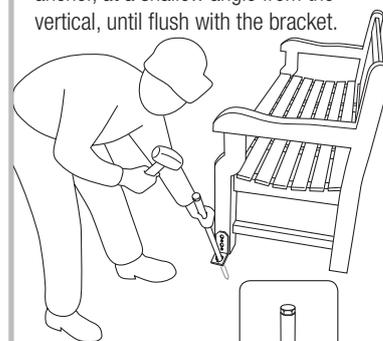

DRIVING OUT THE FLUKE


4

Remove sleeve and using the drive bar only hammer down to drive out the fluke. Remove drive bar and push the tube caps into the tops of the anchors.

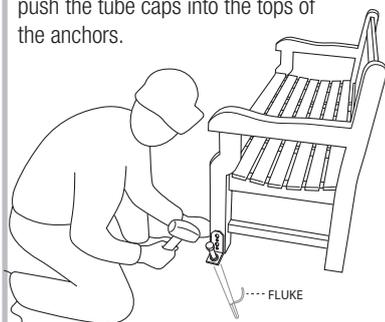

Anchor the two diagonally opposed corners of the seat

5

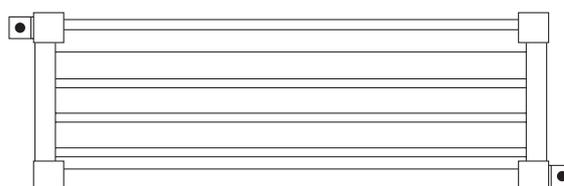

PLAN VIEW